
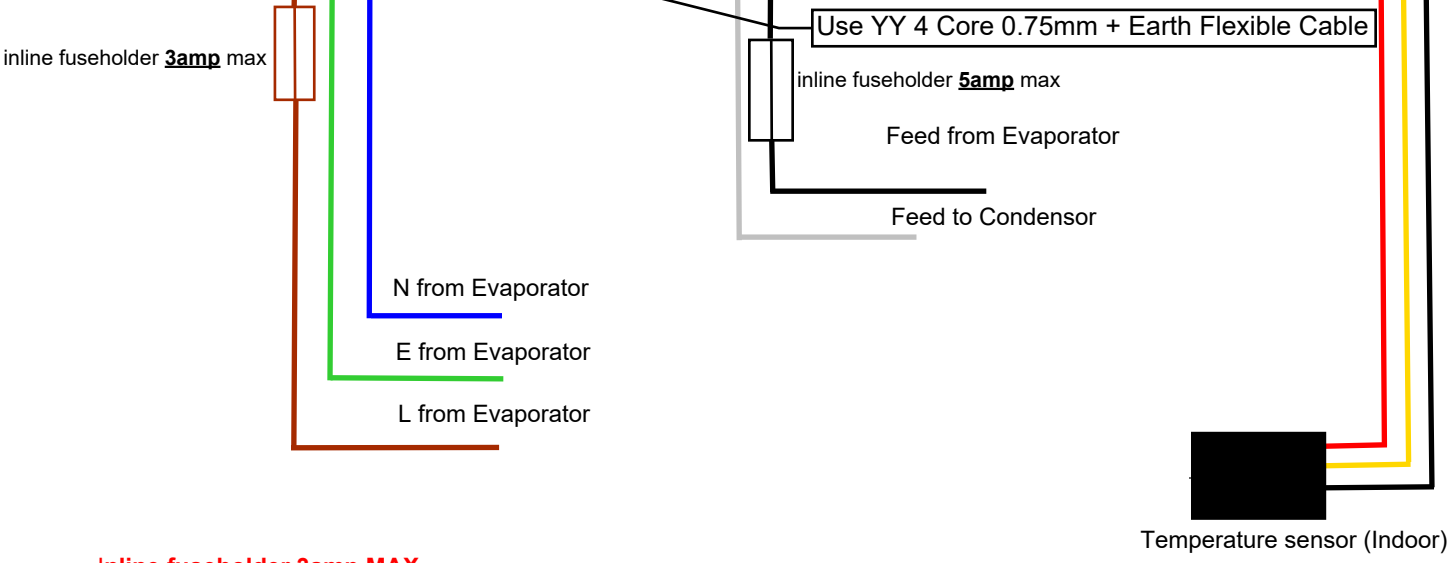


SmartCellar Instructions

Issue 1 2019

Engineer Wiring Instructions

Basic Wiring for Chiller Control

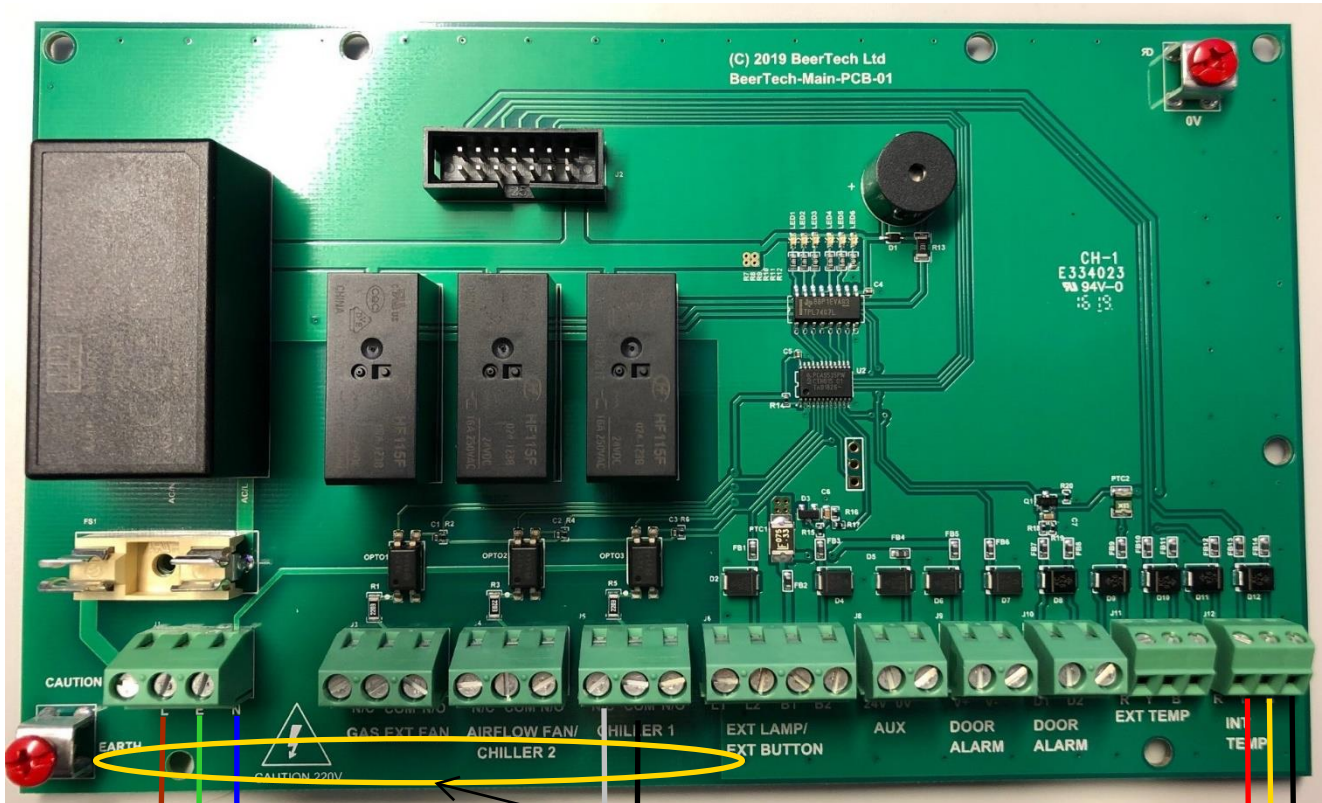

Inline fuseholder 3amp MAX installed in mains supply
Inline fuseholder 5amp MAX installed in Chiller Control supply